



Application: 1984-1996 Corvette

Part Includes

1 - Component

Rear Sway Bar



Tools Needed



Search: *Suspension and Chassis*
www.mamotorworks.com

STEP 1.

Securely raise and support the vehicle so you have adequate room to work under the rear of the vehicle.

STEP 2.

Remove spare tire, spare tire cover, jack and tire carrier if your vehicle is so equipped.

STEP 3.

Loosen and remove the rear sway bar end links. (B)

STEP 4.

Remove nuts securing fuel tank safety straps to rear sway bar brackets and remove straps.

STEP 5.

Next, remove the sway bar insulator retaining nuts on both sides. (A)

STEP 6.

Loosen muffler hanger brackets and disconnect mufflers from hangers.

STEP 7.


Now you can remove rear sway bar assembly from vehicle.

STEP 8.

Hold the new rear in position and install the insulator brackets nuts and bolts onto the rear cross member. (Tighten nuts to 70 lb ft and bolts to 18 lb ft) (A)

STEP 9.

Install the rear sway bar end links on both sides of the vehicle. (Tighten to 39 lb ft) (B)

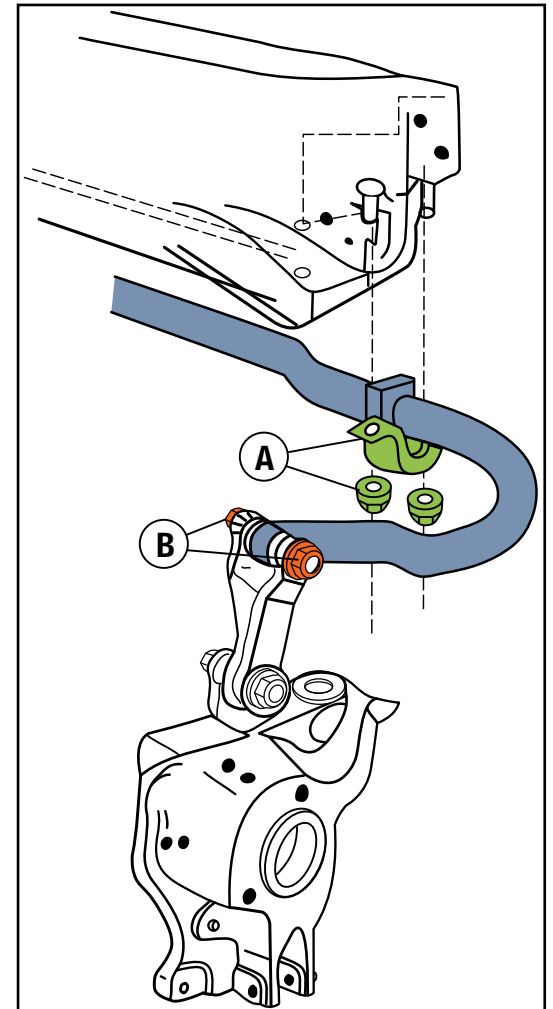

Mamotorworks



@CorvettePassion



MidAmericaMotorworks



CorvettePassion

2900 North Third Street, Effingham, IL 62401

800.500.1500 • Worldwide: 217.540.4200 • FAX: 217.540.4800

www.mamotorworks.com • generalmail@mamotorworks.com

©Mid America Motorworks, Inc. All rights reserved.