



Application: 1984-1996

Part Includes

1 - Component

Underhood Switch & Bulb Kit



Tools Needed




Search: *Lighting, Exterior & Interior*
www.mamotorworks.com

STEP 1.

To access the hood amp bulb and mercury switch, open the hood and remove the two screws holding the lens to the light assembly. Be careful when removing the screws; the lens is slotted on the end and will easily drop off.

STEP 2.

Hold onto it while removing the screws. The bulb and mercury switch merely unsnap.

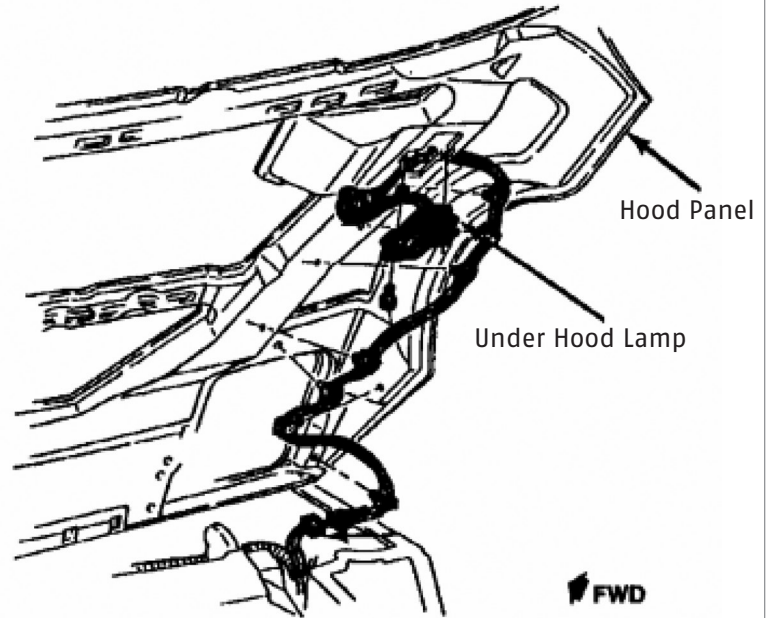

Mamotorworks



@CorvettePassion



MidAmericaMotorworks



CorvettePassion

2900 North Third Street, Effingham, IL 62401
800.500.1500 • Worldwide: 217.540.4200 • FAX: 217.540.4800
www.mamotorworks.com • generalmail@mamotorworks.com

©Mid America Motorworks, Inc. All rights reserved.