



Application: Corvette 1997-2004

Part Includes

- 4 - Bushings
- 4 - Flat Washers
- 2 - Nyloc Nuts
- 2 - Hex Bolts

Rear Suspension Lowering Kit



Tools Needed



Search: *Suspension & Chassis*
www.mamotorworks.com

REAR END

STEP 1.

Lift car with jack and place car on jack stands.

STEP 2.

With the jack, lift near the end of the spring to relieve tension.

STEP 3.

Remove the clip at the top of the spring bolt, use wrenches to remove the bolt.

STEP 4.

Replace stock bolt and bushings with supplied bolt and bushings.

FRONT END

STEP 1.


Lift car with jack and place car on jack stands.

STEP 2.

With the jack, lift near the end of the spring to relieve tension.

STEP 3.

Tighten the end bolt to desired height or until the bolt bottoms out.

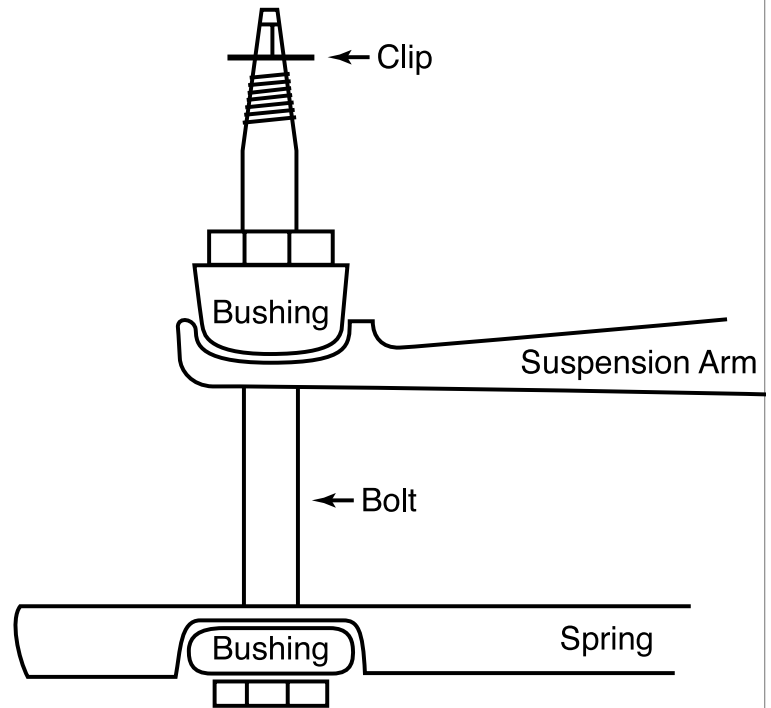

Mamotorworks



@CorvettePassion



MidAmericaMotorworks



CorvettePassion

2900 North Third Street, Effingham, IL 62401

800.500.1500 • Worldwide: 217.540.4200 • FAX: 217.540.4800

www.mamotorworks.com • generalmail@mamotorworks.com

©Mid America Motorworks, Inc. All rights reserved.