



**Application:** 1997-2004

**Part Includes**

1 - Component

# Forward Splash Guards



## Tools Needed



Search: **Vehicle Protection**  
[www.mamotorworks.com](http://www.mamotorworks.com)

### PREPARATION:

It is not necessary to remove the rear wheels, but you may want to do so to allow more room to work. Clean the front area of wheel well, making sure to remove debris from behind rolled-in edge of the body.

### INSTALLATION:

#### STEP 1.

The top of the guard lines up with the bottom of the body line (#1) and the inner curve of the guard follows the curve of the rolled-in part of the body (#2).

#### STEP 2.


The guard simply clips on to the rolled-in part of the body, using the supplied clips (4 clips per guard). Top clip mounts 2" from the top of the guard (#3). The far inside clip mounts 1" from the inside corner of the guard (#4). The clips will lock as they are pushed on to the inner body panel.

#### STEP 3.

Guards can be removed by pushing inward on the guard until the clips release or by prying open the clip with a flat screwdriver to release the guard.

#### STEP 4.

Guards can be cleaned right along with the car.

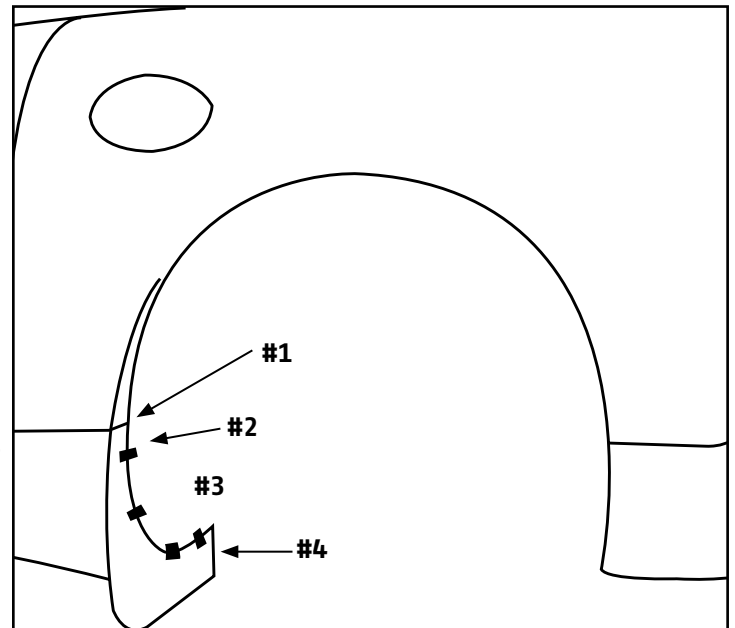

Mamotorworks



@CorvettePassion



MidAmericaMotorworks



CorvettePassion

2900 North Third Street, Effingham, IL 62401

800.500.1500 • Worldwide: 217.540.4200 • FAX: 217.540.4800

[www.mamotorworks.com](http://www.mamotorworks.com) • [generalmail@mamotorworks.com](mailto:generalmail@mamotorworks.com)

©Mid America Motorworks, Inc. All rights reserved.