



**Application:** 1963 - 1982 C2 - C3 Corvette

**Part Includes**

- 1 - Fuel Line
- 2 - Washers
- 1 - Nut

## Fuel Line



**Tools Needed**



Search: *Fuel System*  
[www.mamotorworks.com](http://www.mamotorworks.com)

**WHEN INSTALLING, REFER TO THE DIAGRAM BELOW. ALWAYS USE SUPPLIED A & B WASHER.**

**STEP 1.**

Place washer carburetor side of fitting.

**STEP 2.**


Place fitting in line with carburetor washer "A".

**STEP 3.**

Place washer "C" in line with fitting "B".

**STEP 4.**

Align nut "D" through A, B, & C. Align tube portion and secure nut.

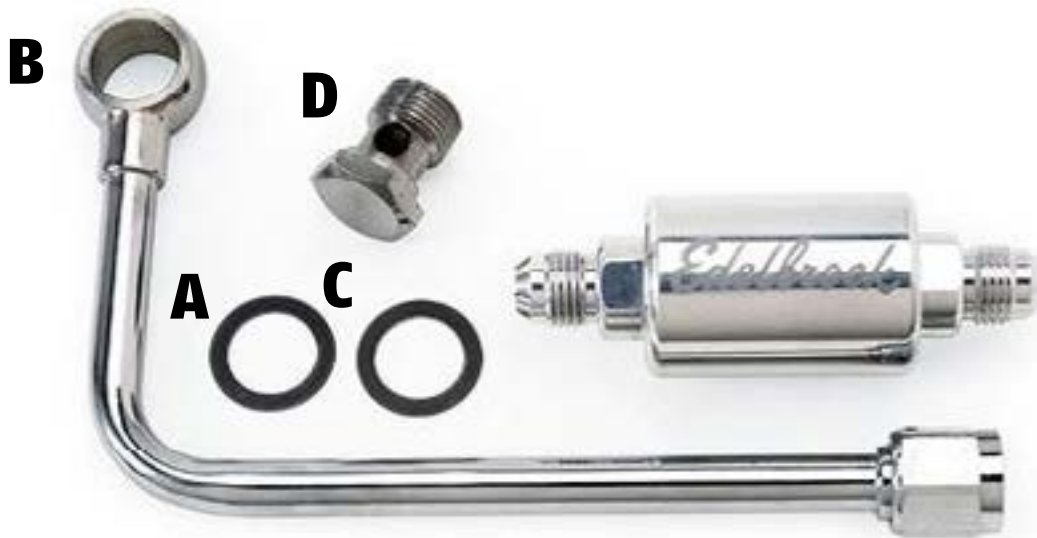

Mamotorworks



@CorvettePassion



MidAmericaMotorworks



CorvettePassion

2900 North Third Street, Effingham, IL 62401  
 800.500.1500 • Worldwide: 217.540.4200 • FAX: 217.540.4800  
[www.mamotorworks.com](http://www.mamotorworks.com) • [generalmail@mamotorworks.com](mailto:generalmail@mamotorworks.com)  
 ©Mid America Motorworks, Inc. All rights reserved.