



Application: 1997-2004 Corvettes



Search: **Lighting, Exterior & Interior**
www.mamotorworks.com

C5 Exhaust Enhancer Plate LED Lighting Kit




Tools Needed



Step 1. You can remove the outer taillight to gain access to the rear marker light or lift the rear of the car to give yourself room to reach up past the exhaust to remove the rear side marker sockets (red arrow). Turn the socket 1/4 turn counter clockwise and drop the wiring down. You can also remove the outer taillight to gain better access.



Step 2. This image shows how to use the connectors. Strip some of the covering back. Place the wire in the metal V on the connector and snap closed until it latches. Repeat for both wires.

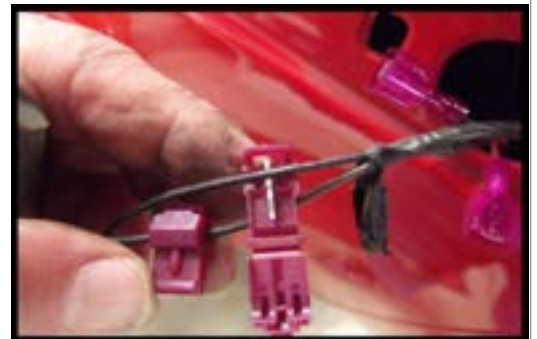

Step 3. This is the area where the LED bar will mount on the rear fascia between the exhaust pipes. Temporarily place the bar here and route the wires up toward the side markers making sure the wires will reach the marker lights once plugged in.



Mamotorworks



@CorvettePassion



MidAmericaMotorworks



CorvettePassion

2900 North Third Street, Effingham, IL 62401
800.500.1500 • Worldwide: 217.540.4200 • FAX: 217.540.4800
www.mamotorworks.com • generalmail@mamotorworks.com
©Mid America Motorworks, Inc. All rights reserved.



Description (cont.)

Step 4. Next plug the LED wires into the back of the connectors and be sure you seat them completely. Plug the red LED wire into the brown car wire and the Black LED wire into the black car wire. Turn on the lights to test the LEDs.



Now you can refer to the above picture to mount the LED bar.

Wipe the mounting area with the alcohol pad and let dry.

Peel the backing from the adhesive strip and mount the bar in place. Hold firmly for a minute or two to make sure it sticks.

Now use the supplied cable ties to tie the wires away from the exhaust system. Turn on the lights to check your wiring one last time.