



Application: 1997-2004 Corvette




Search: **C5 Interior LED Lighting Kits 1997-2004**
www.mamotorworks.com

Corvette C5 Window Switch LED Lighting Kit



Tools Needed

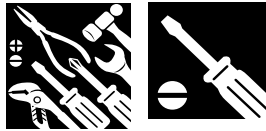

Step 1. Remove drivers side window switch panel by prying up on the **BOTTOM** of the panel as shown. Remove the passenger side by prying up on the **TOP OF THE PANEL**. You will see 4 small sockets on the drivers side and 2 on the passenger side. Simply turn them 1/8 turn counter clockwise and remove all 6 factory bulbs. Refer to the diagram below for installing the LEDs.

Note: A pair of hemostats with toothed jaws works well for removing the sockets if you need to turn them.



Step 2. This shows the passenger side leds after they have been turned 1/8 turn into position. Top LED in the 6 o'clock position and the bottom one in the 9 o'clock position. Plug the switch in and test the LEDs. Hook the bottom of the switch into the door panel and snap switch back into place.



Mamotorworks



@CorvettePassion



MidAmericaMotorworks



CorvettePassion

2900 North Third Street, Effingham, IL 62401
800.500.1500 • Worldwide: 217.540.4200 • FAX: 217.540.4800
www.mamotorworks.com • generalmail@mamotorworks.com
©Mid America Motorworks, Inc. All rights reserved.



Description (cont.)

Step 3. This picture shows the LED position after they are turned 1/8 turn into position. The top 3 LEDs will have the red dot facing left in the 9 o'clock position and the bottom one is on the right in the 3 o'clock position. Using your thumb, press the LEDs into place firmly. Using a flat bladed screwdriver that fits the slot well, twist clockwise 1/8 of a turn until it locks into place. Plug in the switch panel and test to make sure LEDs light. If they don't, remove it and turn the LED 180 degrees and re-test.

After all LEDs are working, replace panel and snap back into place.

