


Early Style Throw-Out Bearing — Needs Pressure Plate with Collar

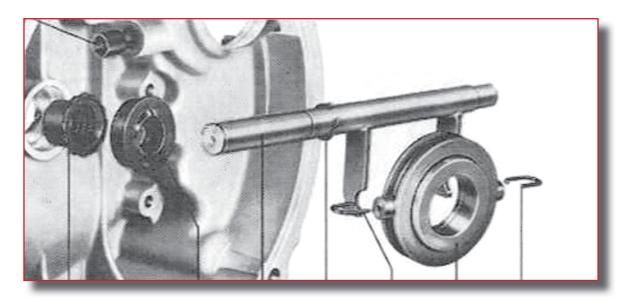

Late Style Throw-Out Bearing — Needs Pressure Plate without Collar

